

P&R

INSTRUMENT SUPPLY, INC.



PC-10K

Hydraulic Pressure Comparator/Calibrator

- Low cost alternative to weight systems
- Self contained
- Ease of operation
- Water or oil operated (do not use deionized water)
- Spare seal kit
- 1/4-18 NPT and 1/2-14 NPT adapters
- Set of wrenches for mounting and unmounting gauges

Accessories

- Additional spare seal kit
- Spare reservoir

■ Operational Description

Ideal for Pressure Gauge Calibration

The PC-10K is a self contained pressure generator that allows comparison of a known pressure as displayed on the master gauge to the display of the pressure sensor under test, attached to the calibrate port.

The PC-10K is capable of generating pressures up to 10,000 psi by rotating the three handled piston drive screw. A fine adjustment knob is included to provide higher resolution.

■ Applications

The PC-10K provides a low cost, portable, easy to operate method of calibration and or pressure generation for the user of large quantities of analog gauges and pressure transducers that require periodic verification of their accuracy. The full scale is changeable depending on the range of the master digital gauge installed on the front or standard port.


PC-10K Hydraulic Pressure Comparator/Calibrator

Hydraulic Comparator Specifications

Performance	
Max Pressure:	10,000 psi
Min Pressure:	5 psi
Burst Pressure:	> 12,000 psi
Weight:	22 lb. (10 kg)
Materials	
Ram/Adaptors:	15-5 SS
Body:	Anodize Aluminum
O-Rings:	Buna N/Nitrile
Test Media:	Water or light oil (do not use deionized water)
Accessories	
Adaptors:	1/4-18 and 1/2-14 NPT standard
Wrenches:	Included

Specifications are subject to change without notice.

Dimensions — in./mm

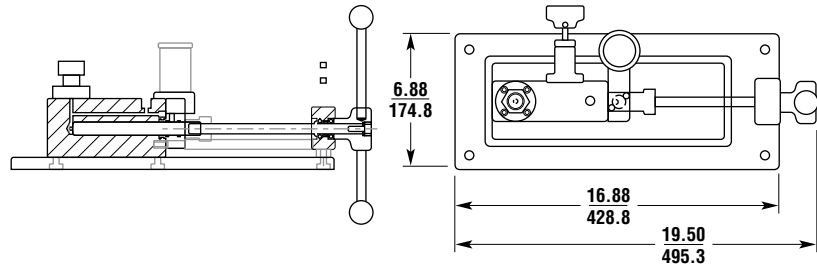

Ordering Information

To order this unit, please use model number: **PC-10K-NG**.

Master Gauge

To order a master gauge, please refer to the PG-5 datasheet and order as a separate item.

Accessories

Please order separately, by part number.

Description	Part Number
Spare seal kit – blue body style	511408
Spare seal kit – gold body style	511501
Spare seal kit – gray body style	511501 & 511502
Spare reservoir	511405